iMC Machine Panel Remote MAC Address for GX60 Output Manual

Ver. 1.0.1 2020/10/15 KOMATSU

MAC address output method manual for GX60.xlsx Front Cover & Change History

Change history

0	,	
Version	Date of update	Update details
1.0.0	2020/9/30	Create New
1.0.1	2020/10/15	Support for multiple email address specifications

MAC Address Output Method

Preconditions

- 1. The Panel Agent must be started (the Constant Monitor button must be blue).
- MAC address output
- 1 Click the Constant Monitor button and open the menu.



2 Select "Remote setting" from the menu.



3 The "Remote setting" screen is displayed.

Remote setting	X				
Please input "Machine Model Name, Model Number", "Serial number", "Distributer Name and your mail address.					
Machine Model Name,Model Number					
Serial number					
Distributer Name					
Mail address					
Discription					
MAC ADDRESS	-=_=				
Check	Cancel				

MAC address output method manual for GX60.xlsx MAC Address Output

4 Enter output information, then click "Check".

Remote setting				
Please input "Machine Model Name, Model Number", "Serial number", "Distributer Name" and your mail address.				
Machine Model Name,Model Number	PC200-11			
Serial number	50000			
Distributer Name	komatsu			
Mail address				
Discription	Discription			
MAC ADDRESS				
Check _	Cancel			

Details on respective items of Remote Setting

Machine Model Name,	Model number	Poquirod	Entries possible with single byte alphanumeric characters and symbols (excluding symbols that cannot be used for file names) *1, *2
Model Number	Model Humber	Required	symbols (excluding symbols that cannot be used for file names) *1, *2
Serial number	Serial No.	Required	Single byte numbers only
Distributor Name	Distributor name	Ontional	Entries possible with single byte alphanumeric characters, symbols
Distributor Name		Optional	and spaces *1
Mail address	Destination email address	Required	Only characters that can be used for email addresses *3, *4
Description	Demerke	Ontional	Entries possible with single byte alphanumeric characters, symbols,
Description	Remarks	Optional	spaces and line feed *1

*1 : Following symbols can be used:
 ! " # \$ % & '() * +, -./:; <=>? @ [\]^_` { | }~
 *2 : Entries not possible for "Machine Model Name, Model Number" with following symbols, as they cannot be used for file names:
 \/: *? " <> |

*3: Characters tl	nat can be used for email addresses are shown below:
Local porti	on
	Only symbols and alphanumeric characters that are shown below, can be used:
	.!#\$%&'*+/=?^``{ }~-
	These cannot be used, however, in following cases:
	When the leading character is "." or "-".
	When "." precedes "@".
	When "." is repeated.
Domain po	
	Only symbols and alphanumeric characters that are shown below, can be used:
	the second s
	These cannot be used, however, in following cases:

When not even a single "." is included. When "@", "-" and "." are entered in succession.

When @, - and . are entered in succession.
*4: When multiple destination email addresses are specified, they must be separated using commas (,), single byte spaces () or semicolons (;) (separating characters may be mixed or duplicated).
Example) example1@domain.com, example2@domain.com, ;;; example3@domain.com

5 Transition to the "Sending confirmation" screen and verify entered information, then click "Send".

Sending confirmation		
destination		-
subject	Remote_setting for PC200-11	_
Attachment	PC200-11,50000.json	-
PC200-11 50000 komatsu Discription Smart Construct	- = = .ion	
	Send Cancel	

6 The "Sending confirmation" screen closes and an email is sent to deliver entered information to the entered email address.



* Refer to "Information on Document Attachment Rules for MAC Addresses" for attached file.