


SC Remote Features Improved

[Released May, 2025]


Version 2.25.0

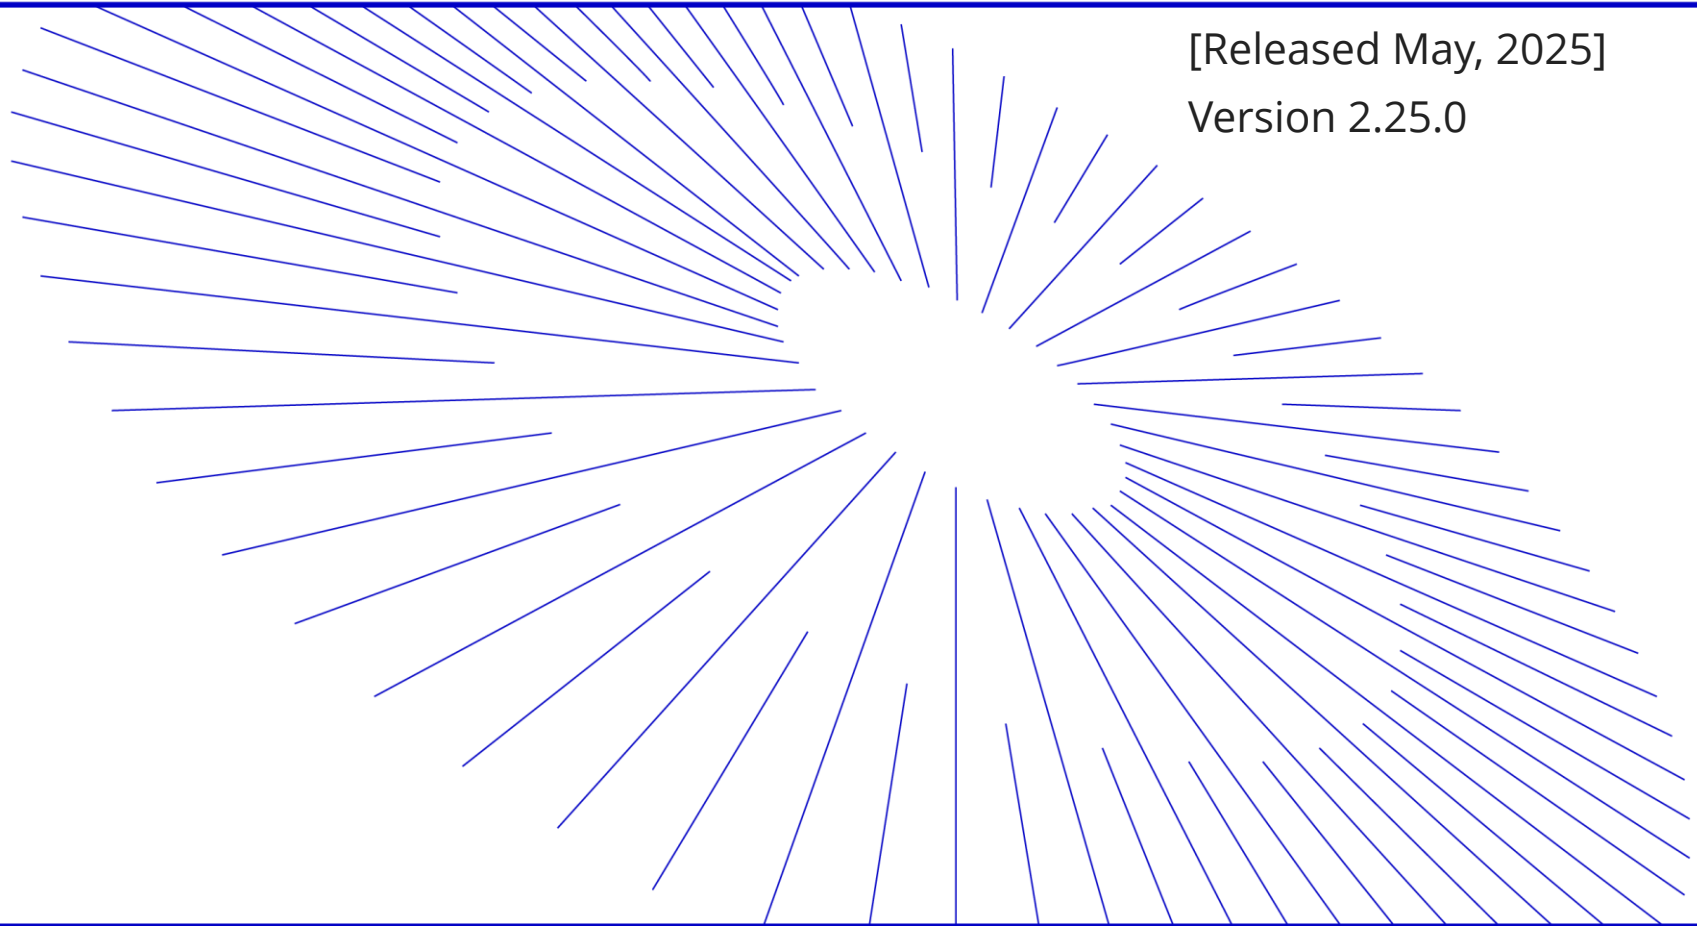

File transfer to TD540 is now supported.
Please configure the settings as described below.

- In "**MACHINE REGISTRATION**", set "**Type of device**" to "**TD540 (Trimble)**".

※ Please note that as part of this update, "**EarthWorks**" has been renamed to "**TD520 (Trimble)**".

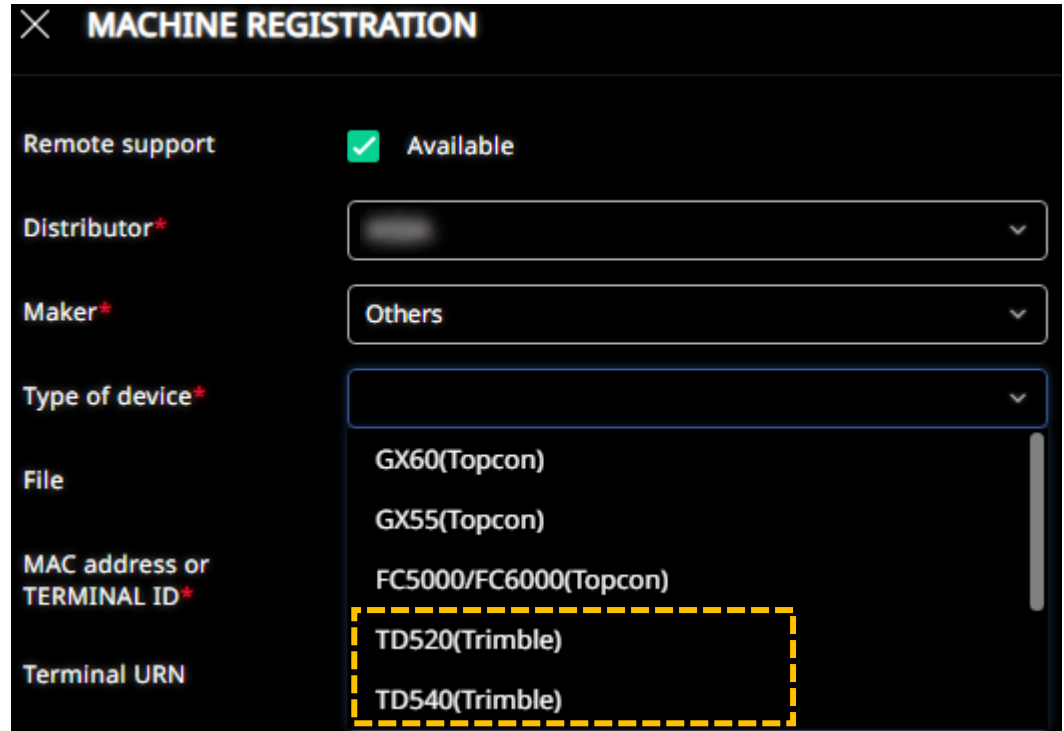

The screenshot shows the "MACHINE REGISTRATION" form with the following fields and values:

- Remote support: Available
- Distributor*: [Redacted]
- Maker*: Others
- Type of device*: [Open dropdown menu]
- File: GX60(Topcon), GX55(Topcon)
- MAC address or TERMINAL ID*: FC5000/FC6000(Topcon), TD520(Trimble), TD540(Trimble)
- Terminal URN: [Empty]

The "Type of device" dropdown menu is open, showing a list of device models. The "TD540(Trimble)" option is highlighted with a yellow dashed box, indicating it is the selected option.



The procedure to transfer files from SC Remote and load the project files on the TD540 is as follows:

<File Transfer (SC Remote to TD540)>

- Same as TD520, files will be transferred as ZIP files.
- The ZIP file will be extracted and saved in the following folder on TD540.

(The transferred folder is different, but the process is the same as for TD520.):

 
Download/Projects/ProjectLibrary

<Loading Projects on TD540>


- After transferring files from SC Remote, open the “Projects” folder in Earthworks on TD540.
- Please refer to the attached video for details.

TD540_Filetransfer.mp4

SC Remote

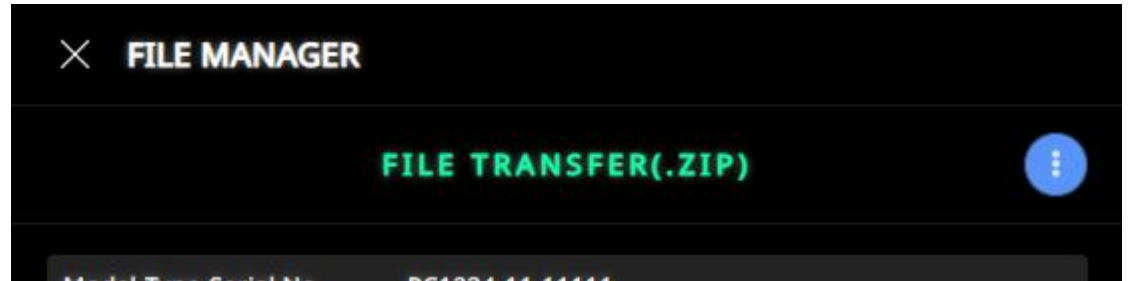

TD540

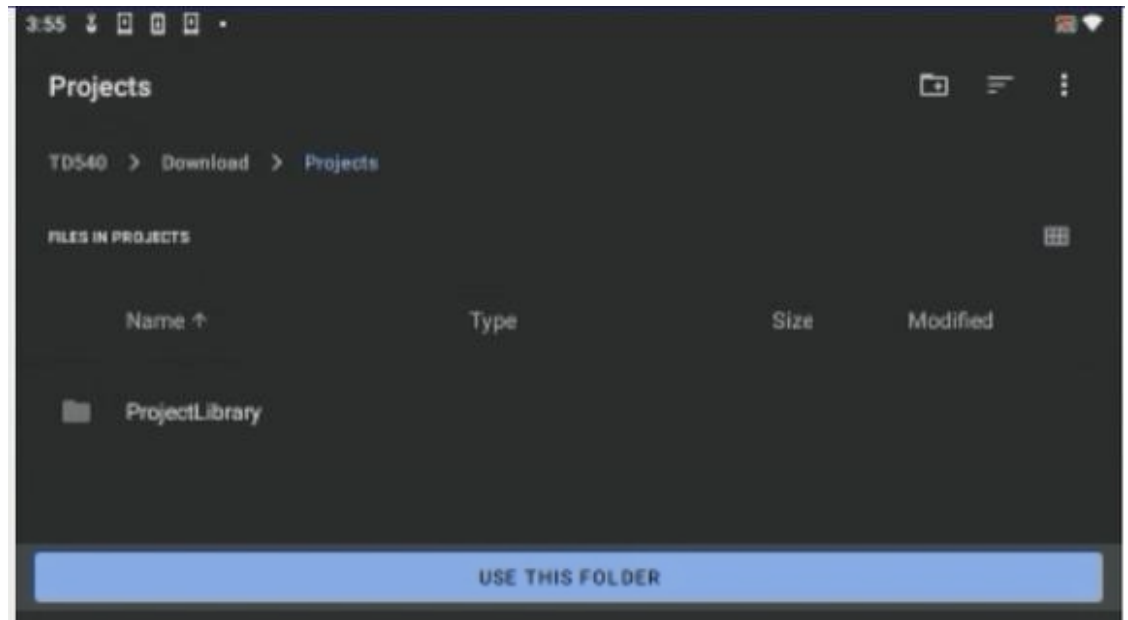 

The system has been updated to allow successful file transfers even when the file name includes symbols such as “[”, “]”, or “_”.

Example: "sample [v1.5].txt"

